


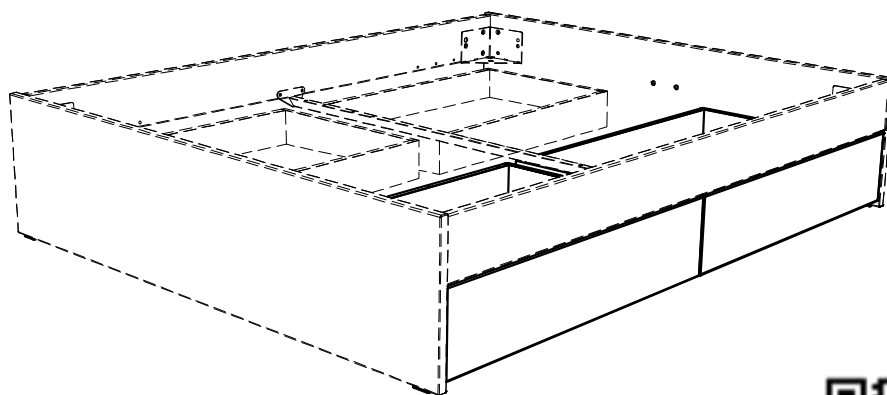
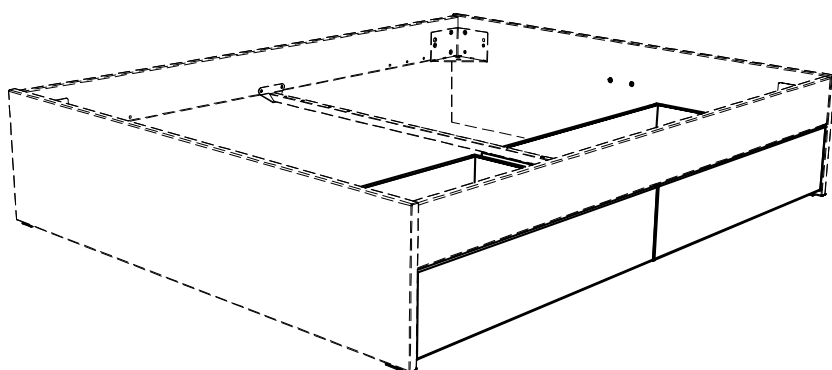














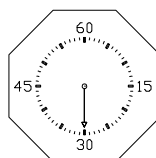




Tip-On




Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari

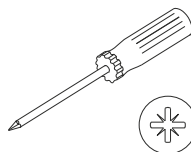

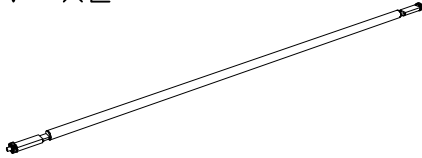
D x1  745.293	E x2  745.283	F x2  745.280	G x2  745.281	H x4  745.282	J x2  745.294
K x20 Ø4x25  631.30900	M x16 Ø8x30  630.02100	R x2  631.95000	S x2  631.08000	T x2  631.61100	Z x12 Ø4x16  631.13300
U x2  li 790.58000 re 790.58100	W x2  li 629.00096 re 629.00097	X x8 Ø4x12  631.16300	Y x28 Ø4x35  631.72900	V x2  790.57700	

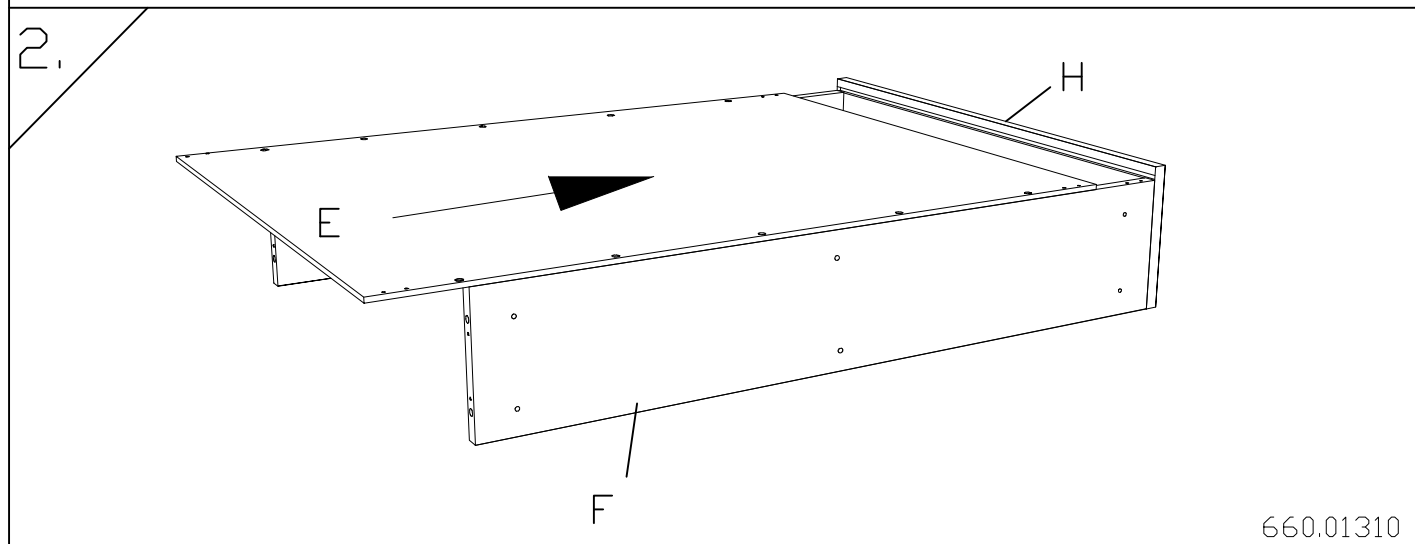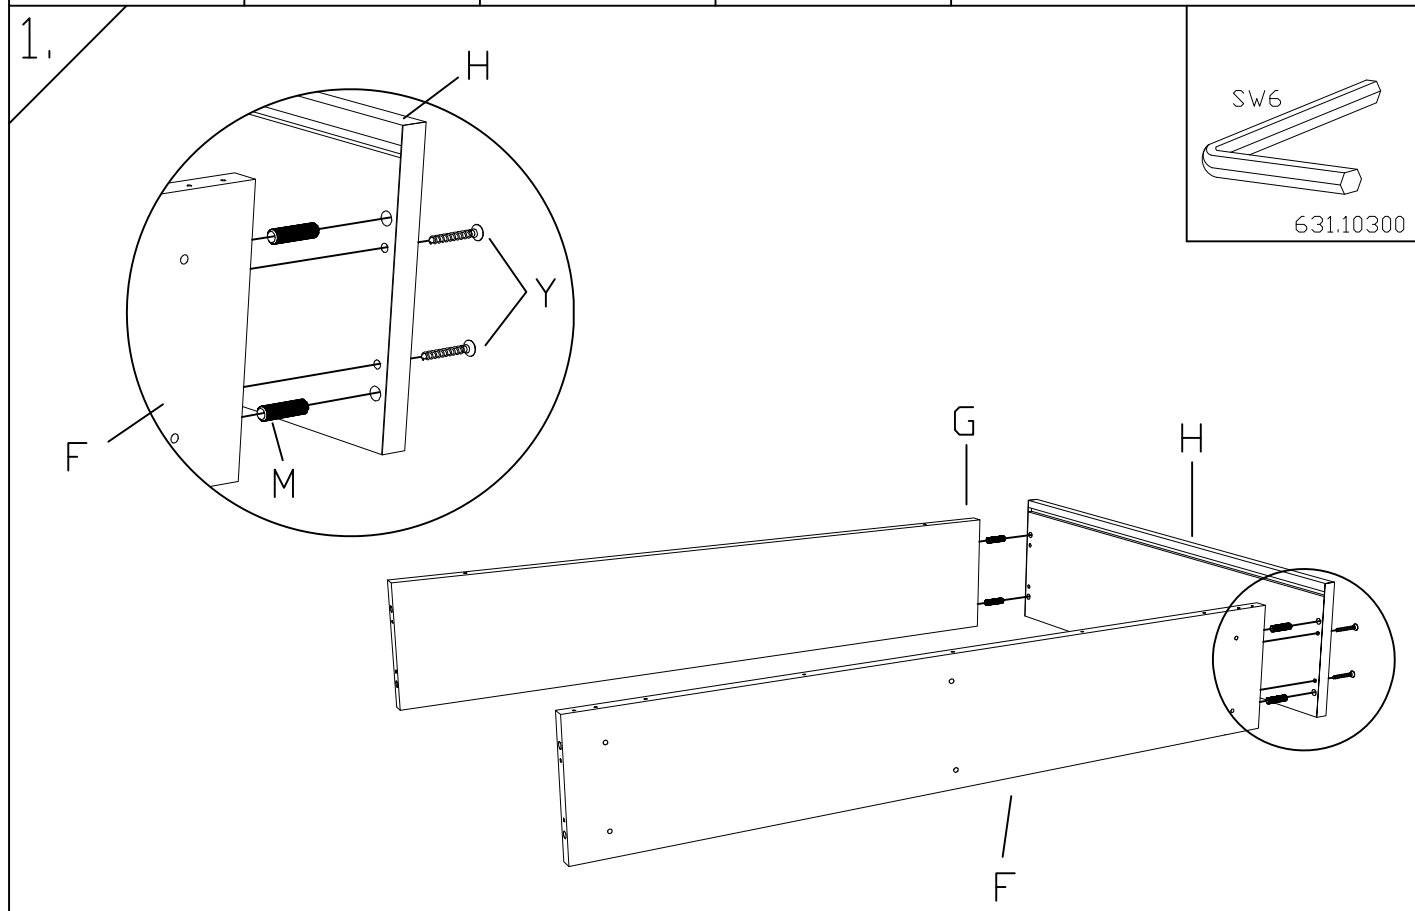


3.

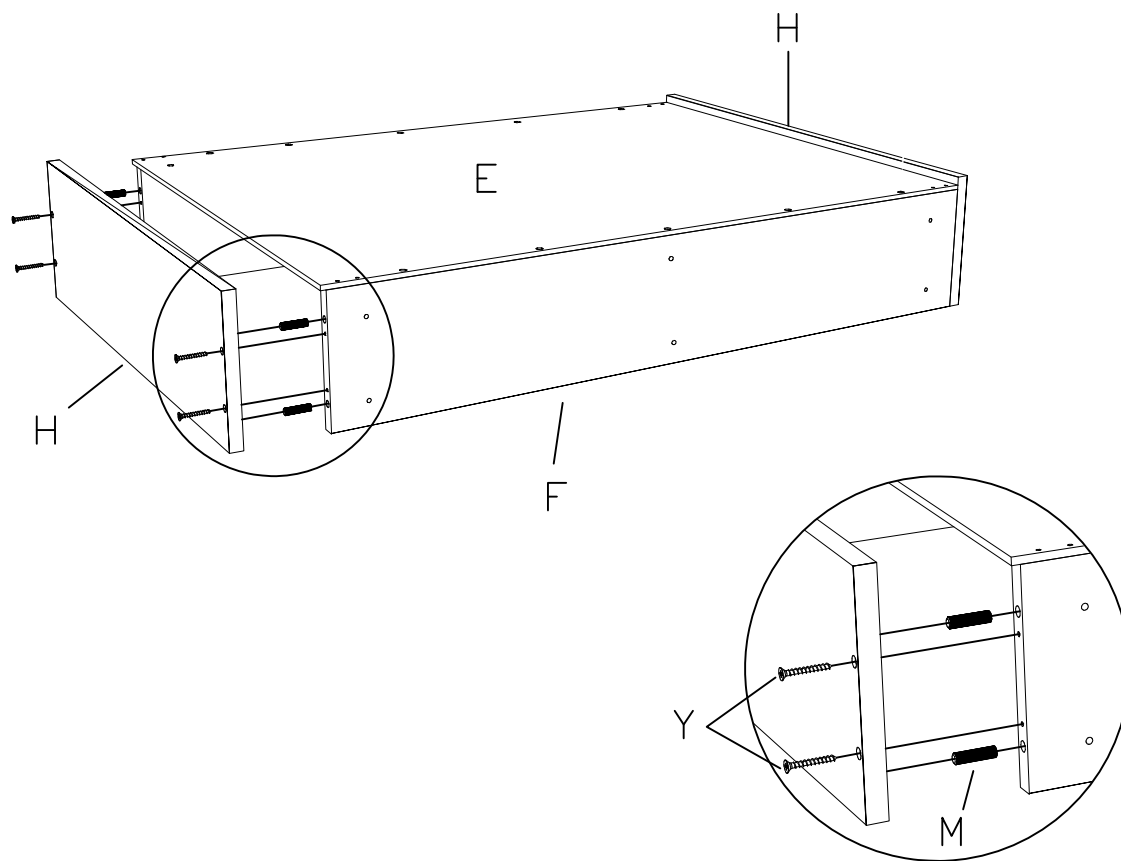


4.


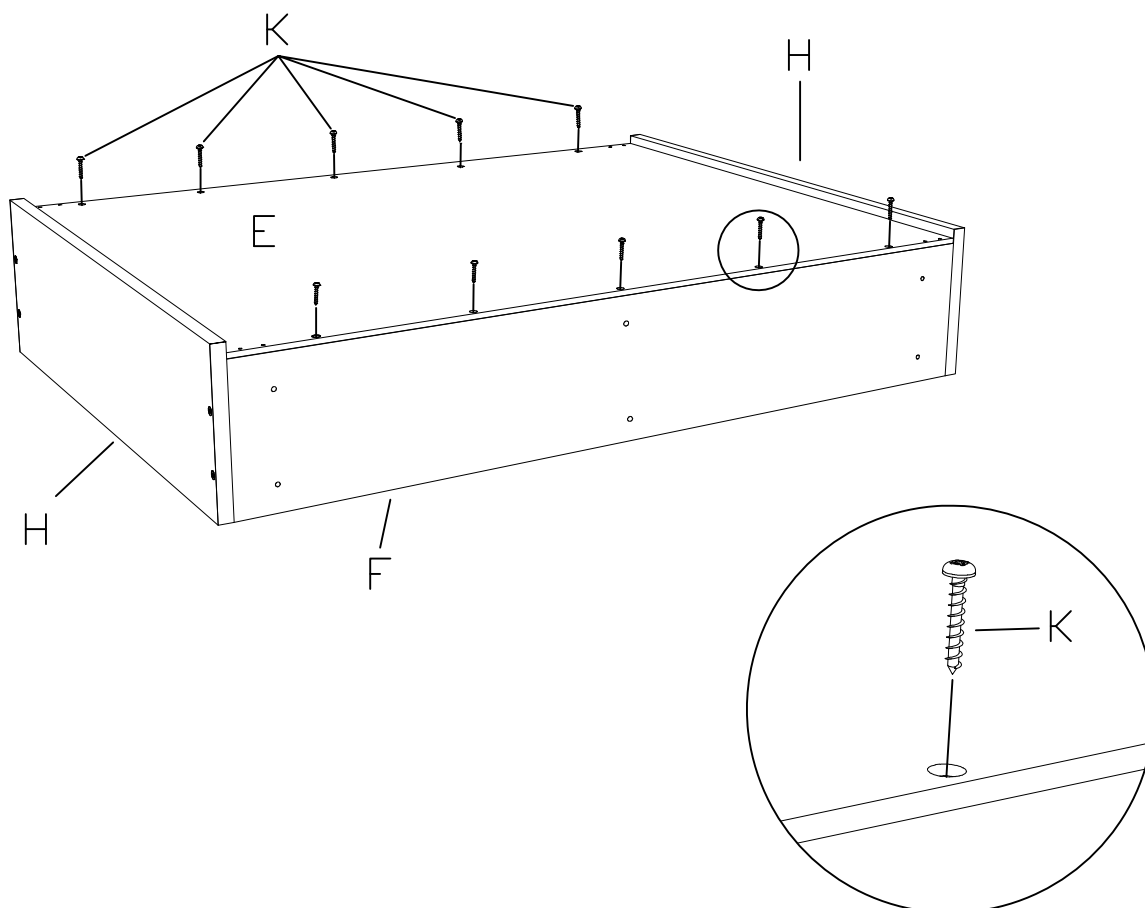


5.

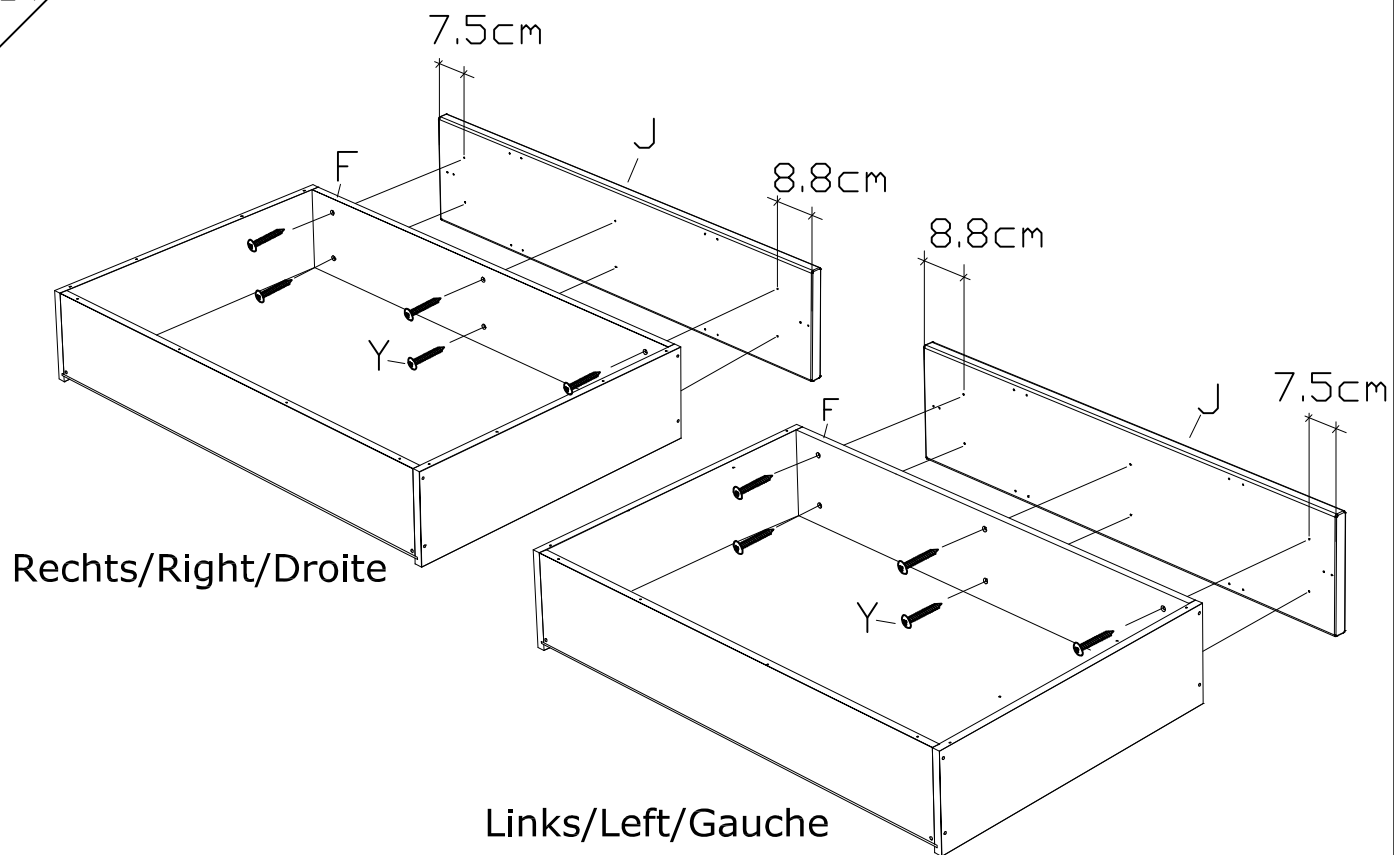


6.

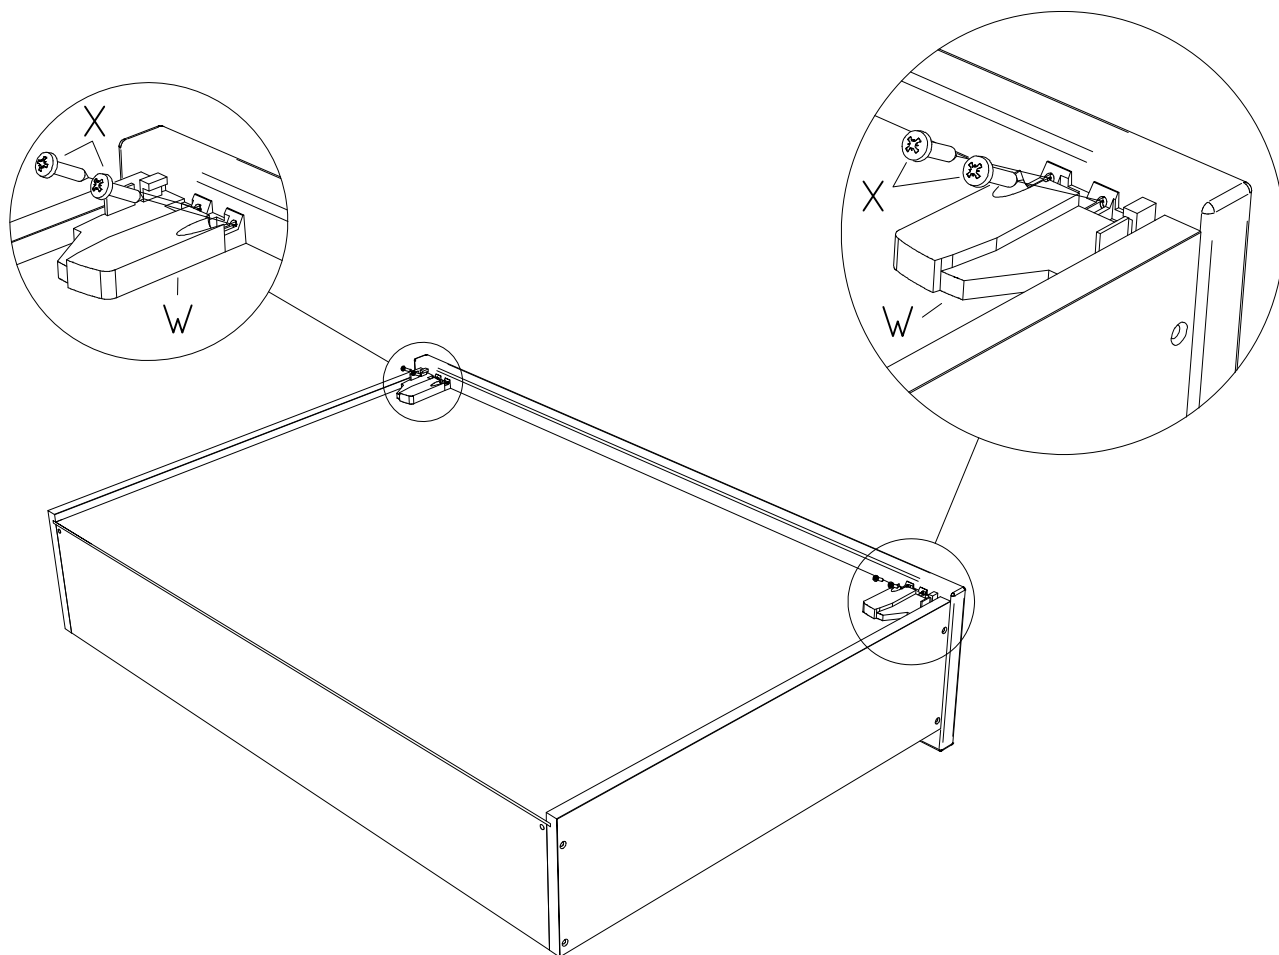


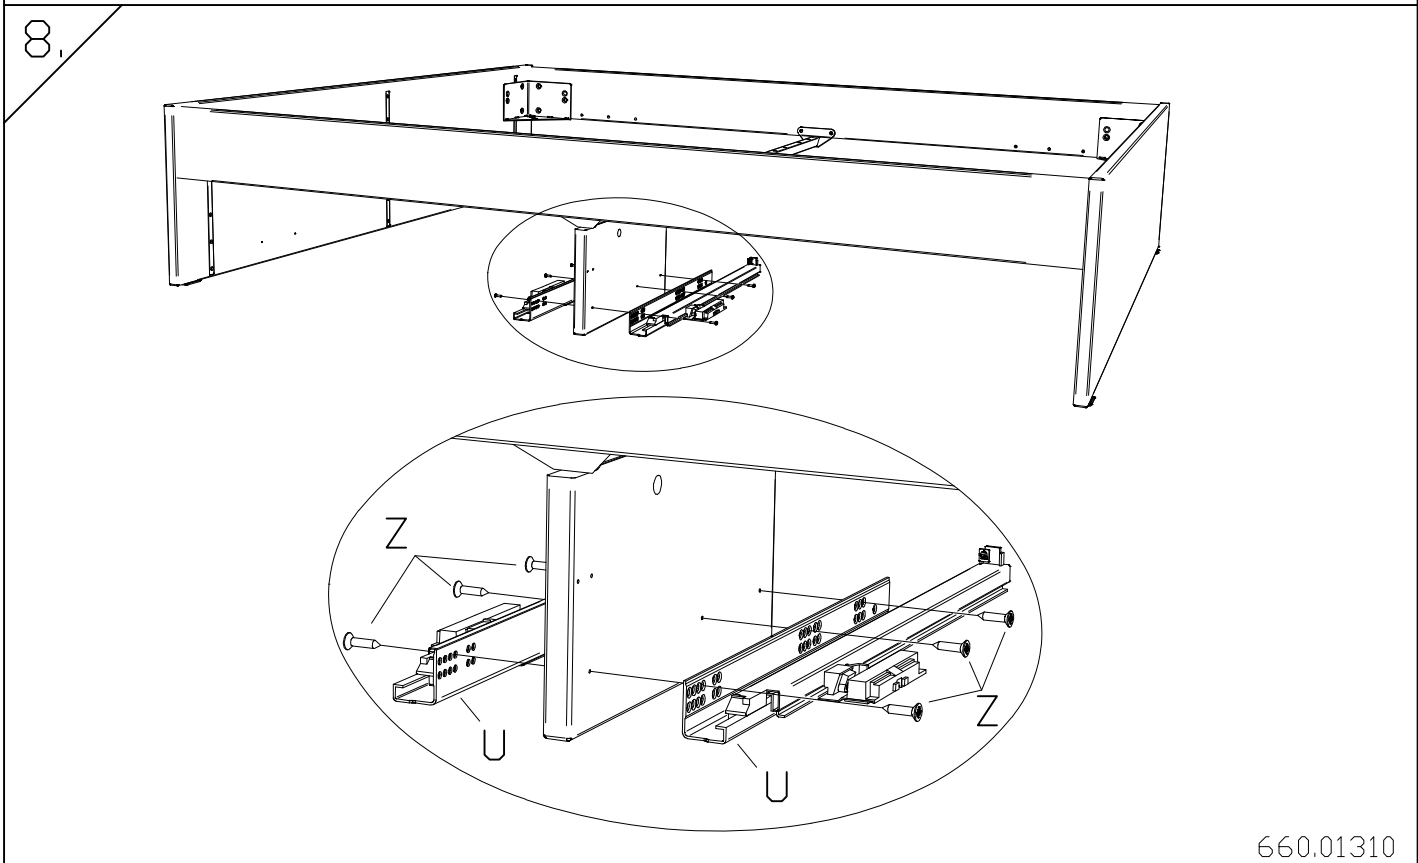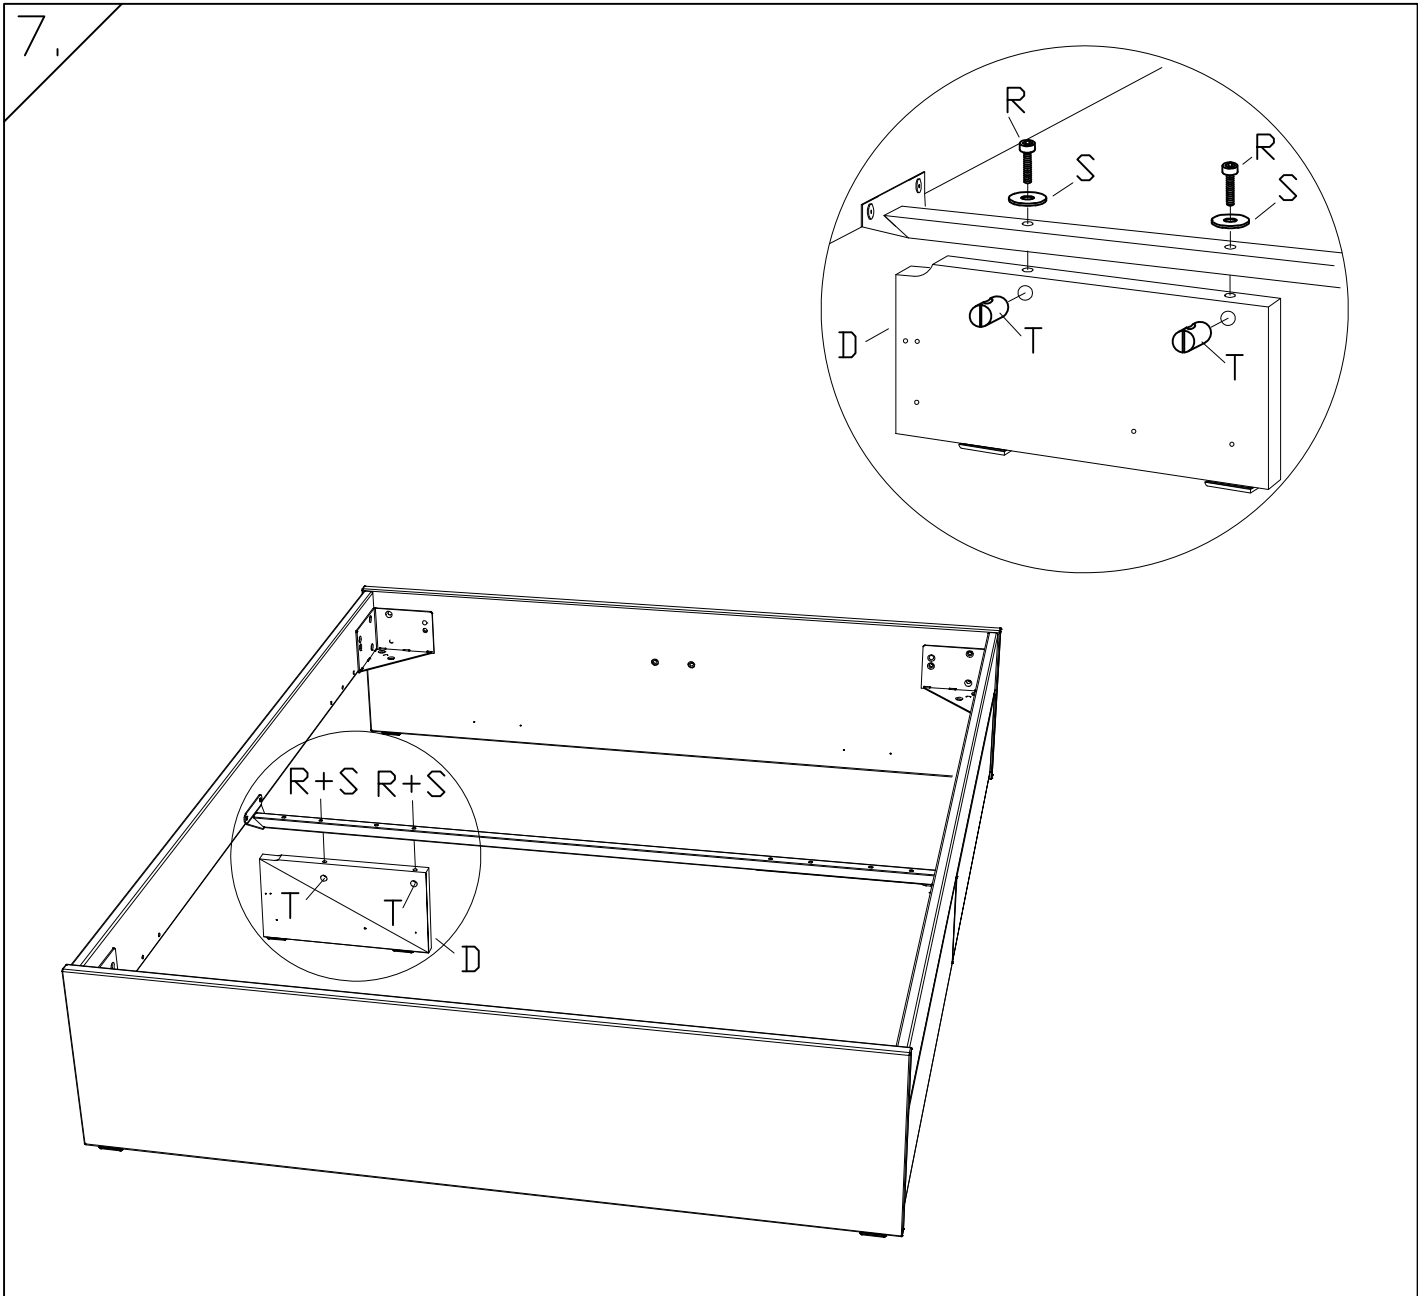



9.

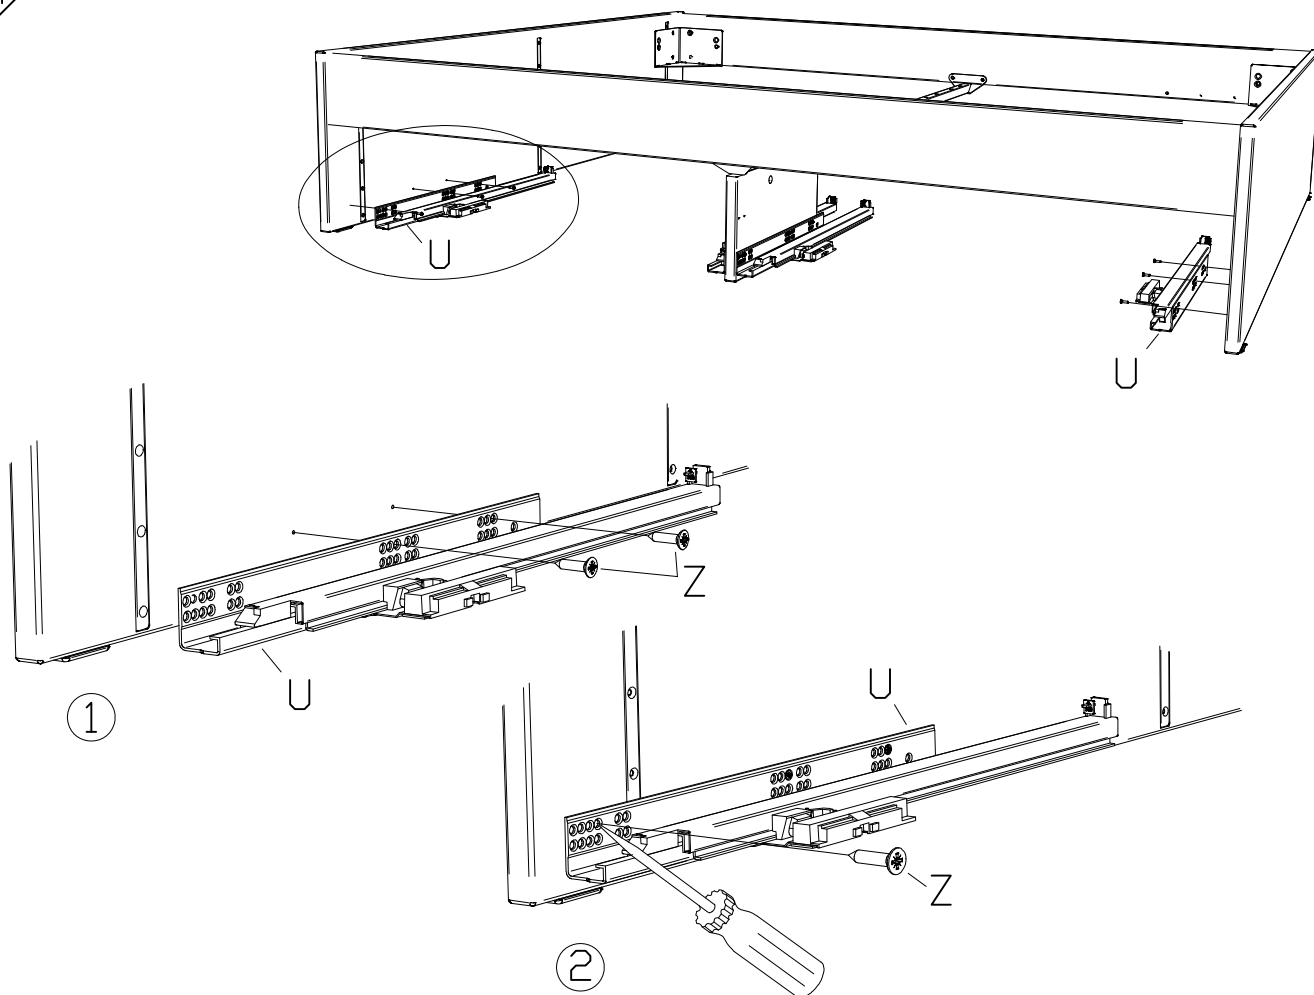


10.

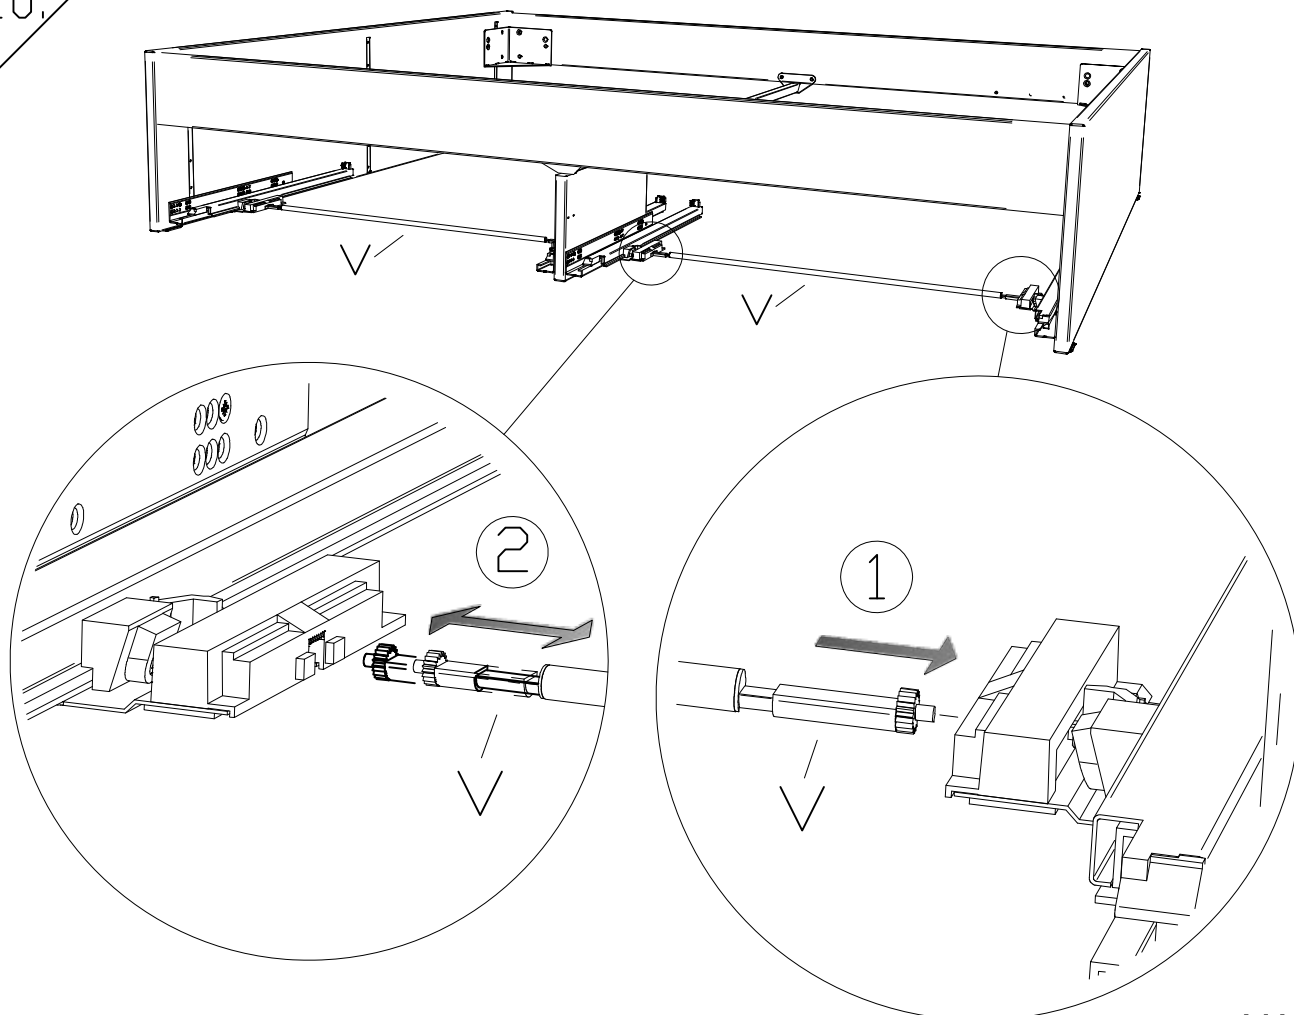


11.

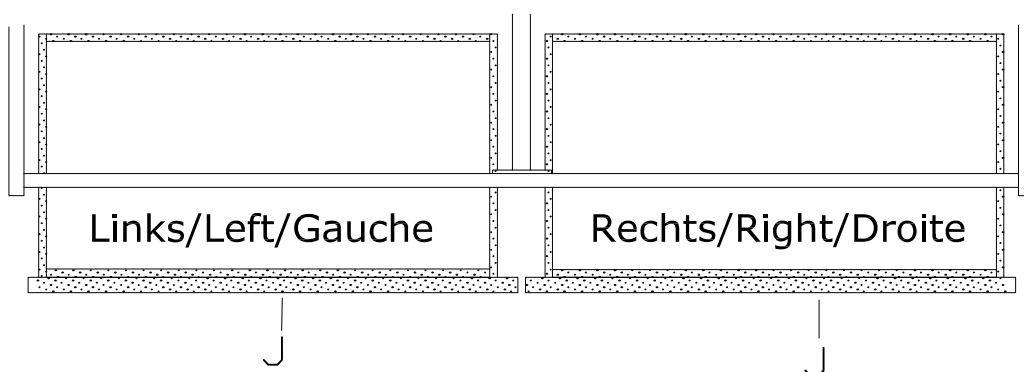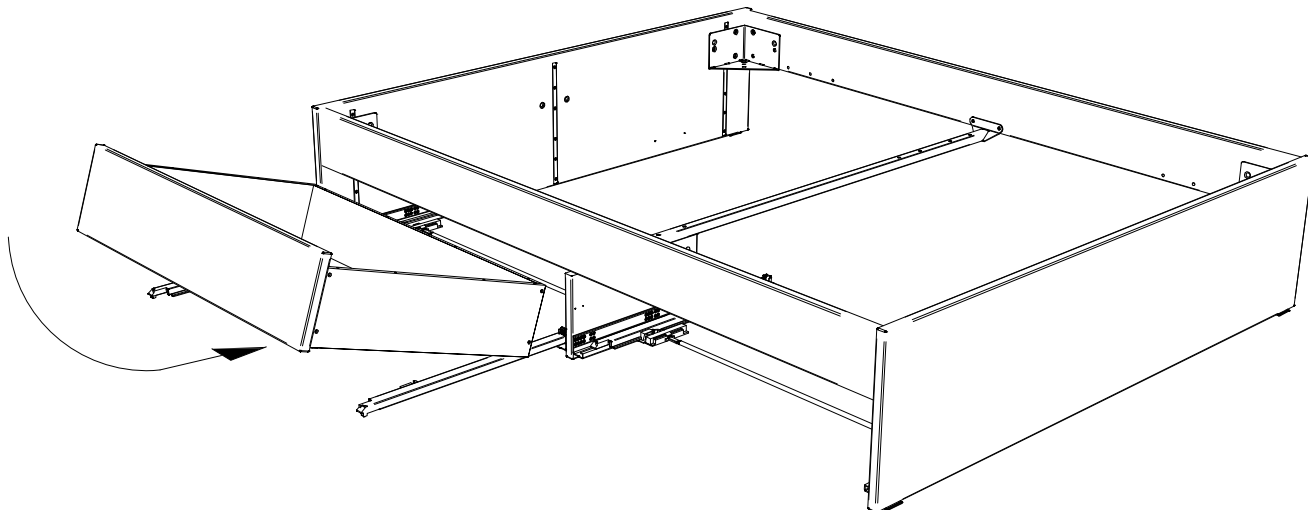

12.

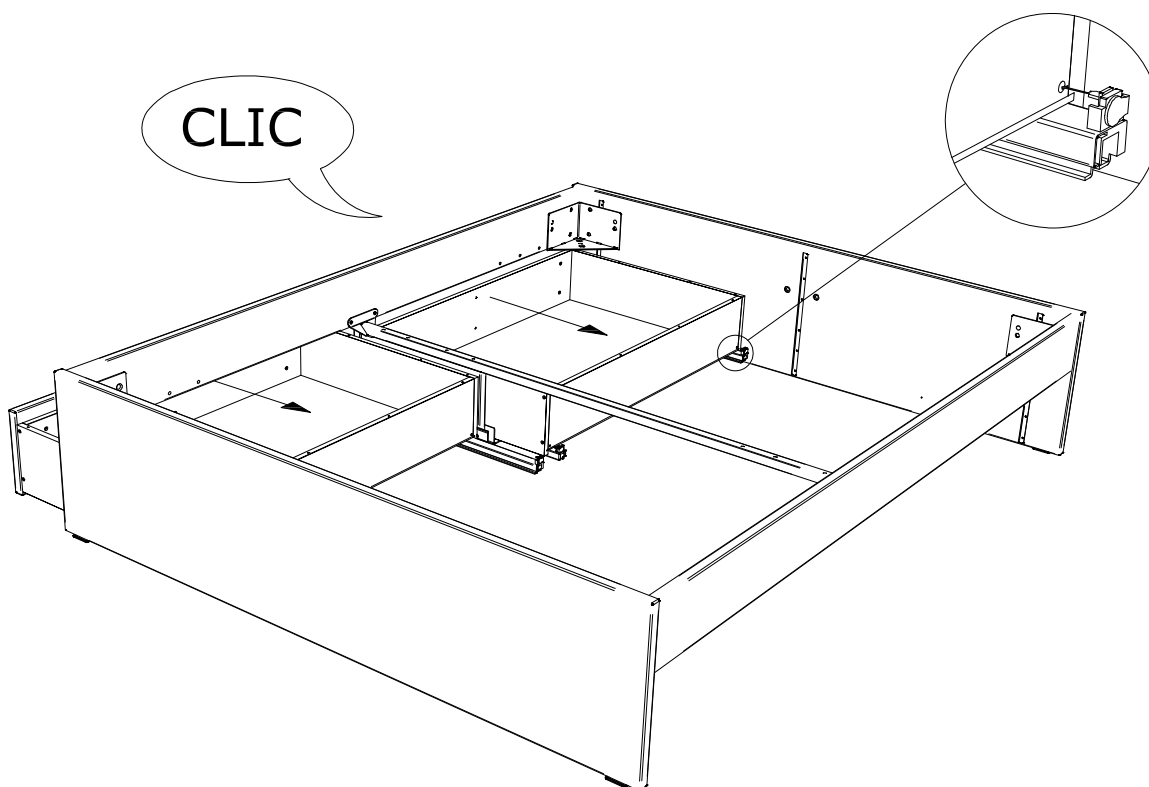

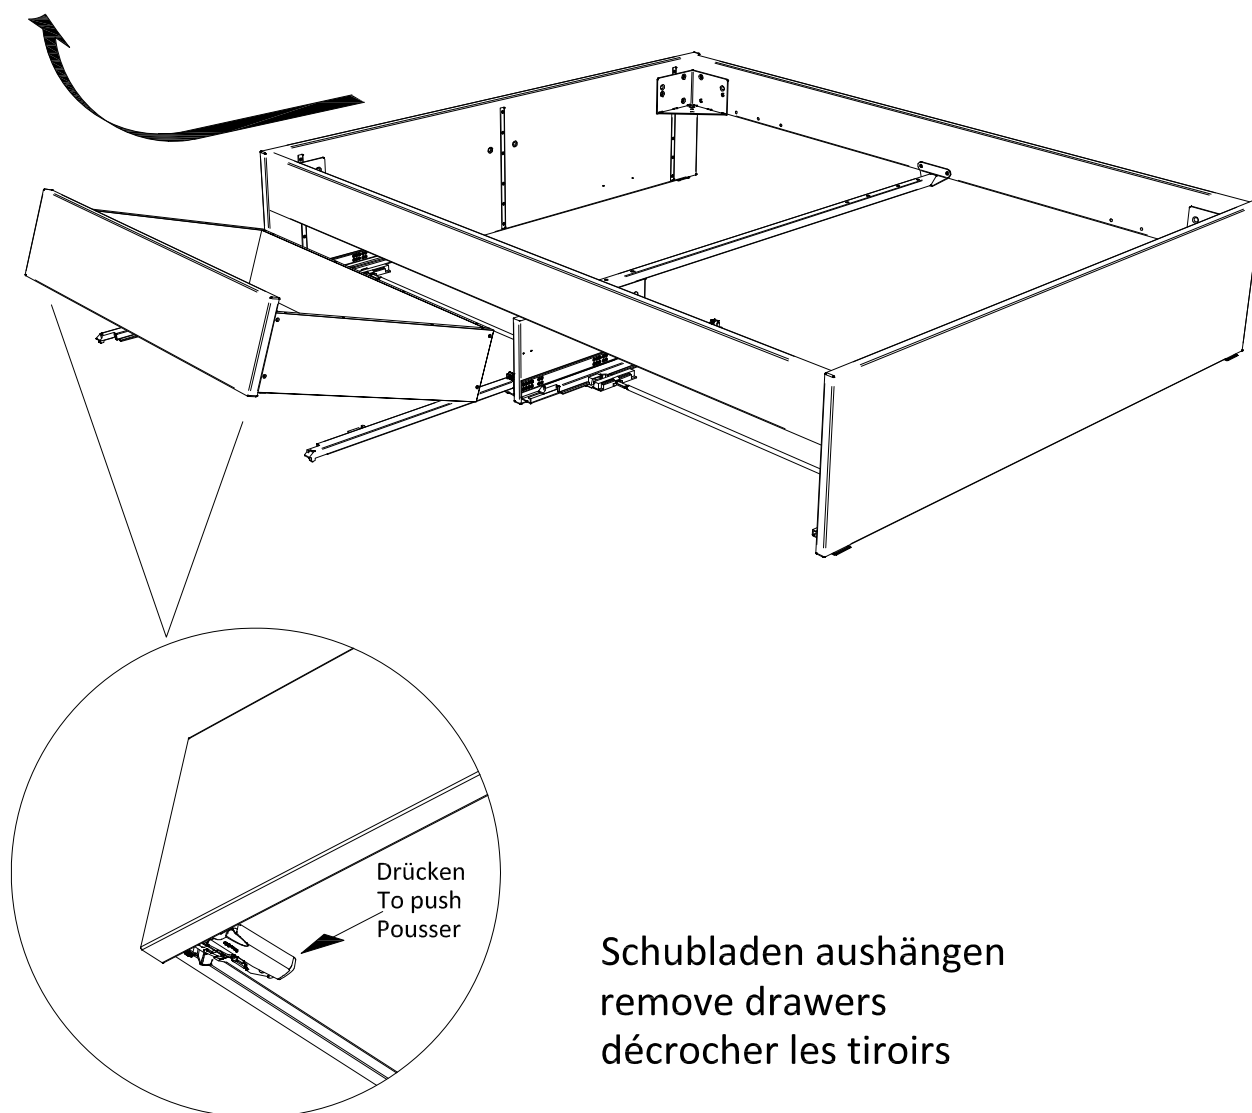

Schubladen aushängen
remove drawers
décrocher les tiroirs