




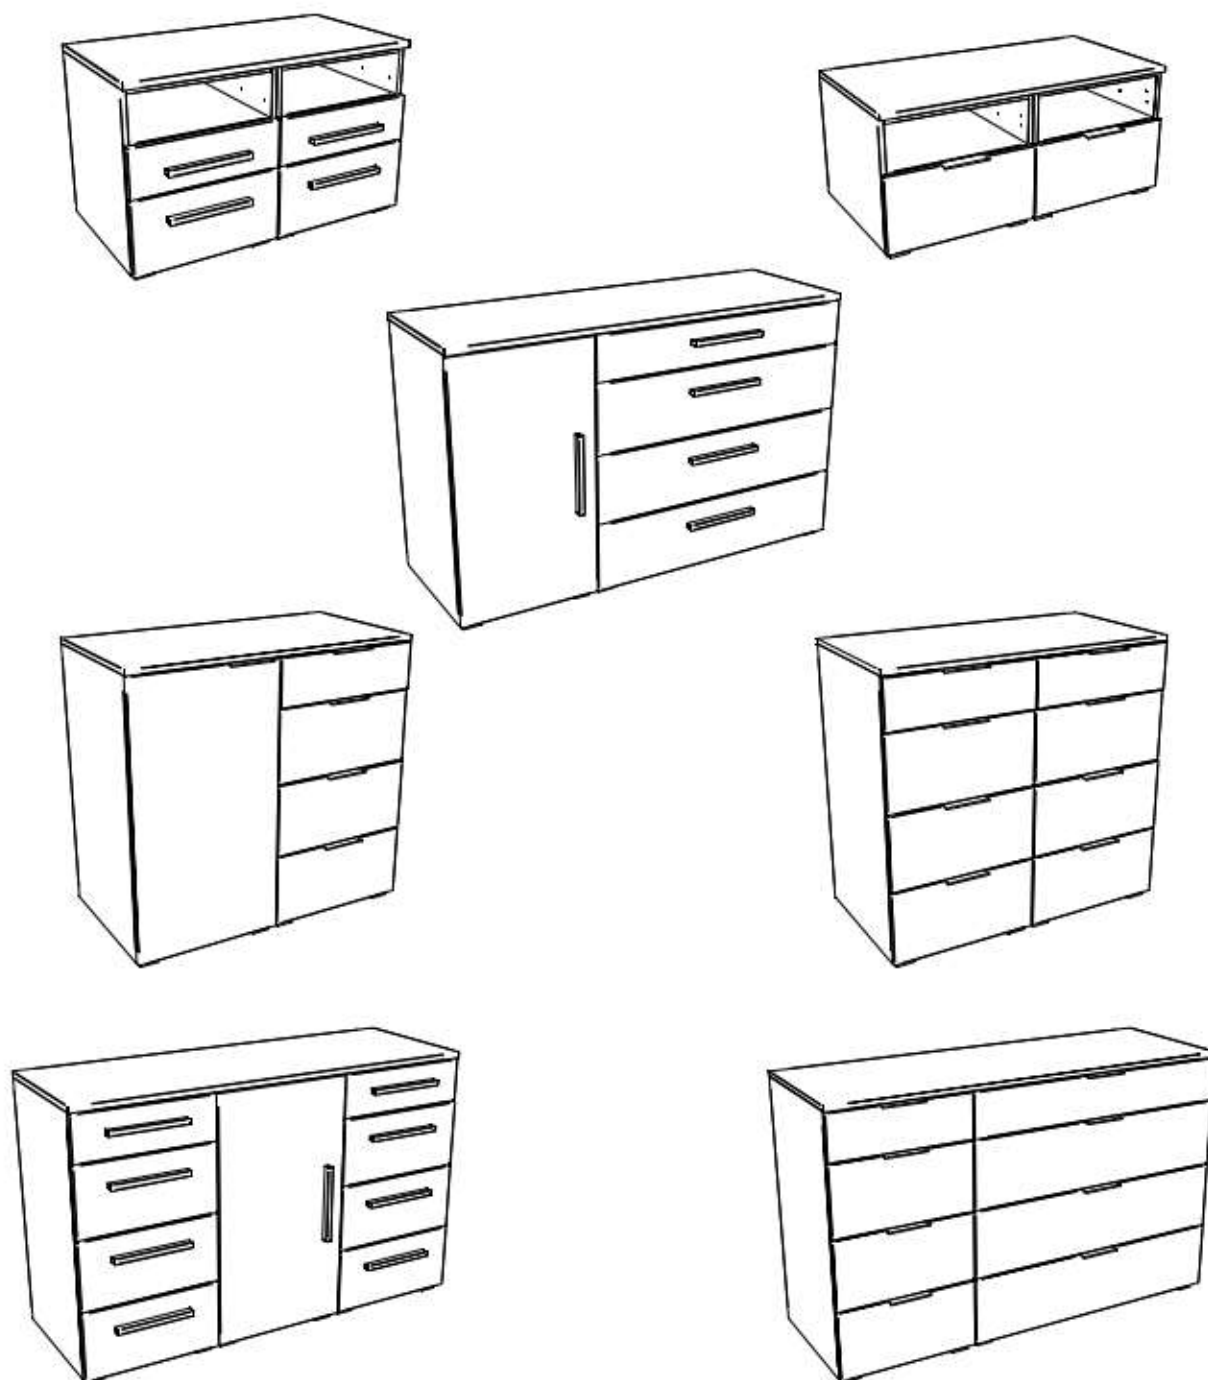


...




Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari



1.

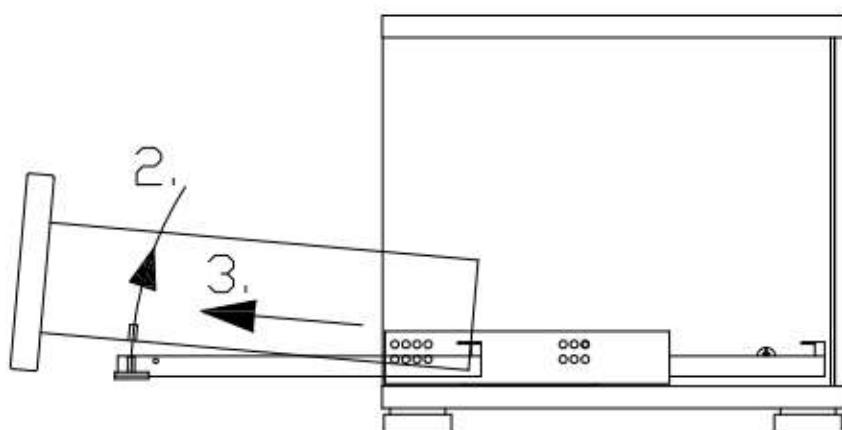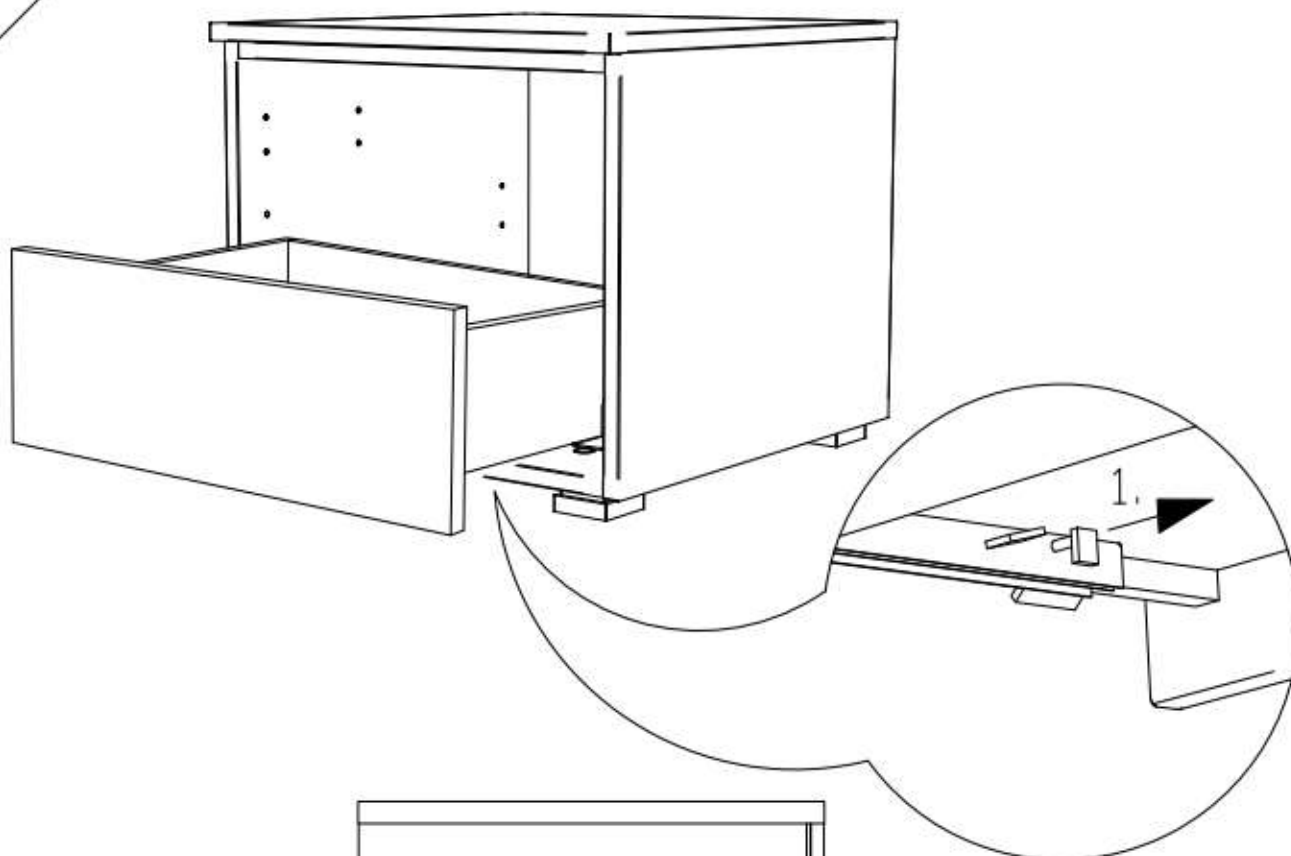

5.

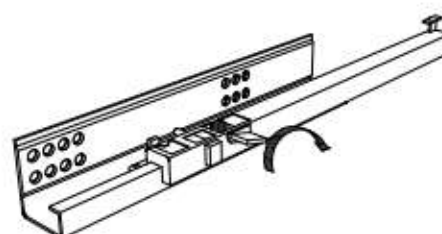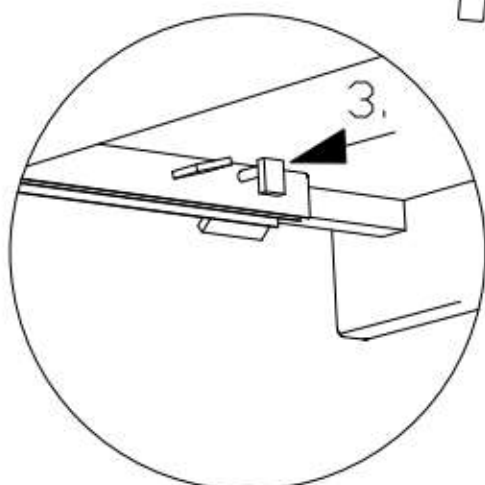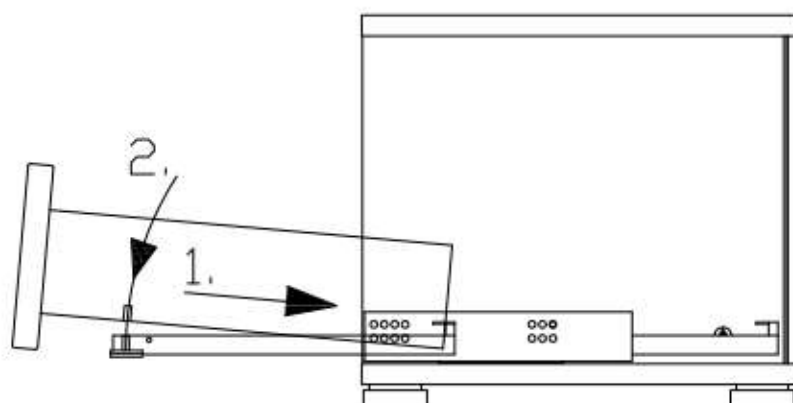

Owita

E x1



J x8

Ø4x25



631.30900

I x4



631.20100

V x4





631.20200





Ø5



2.

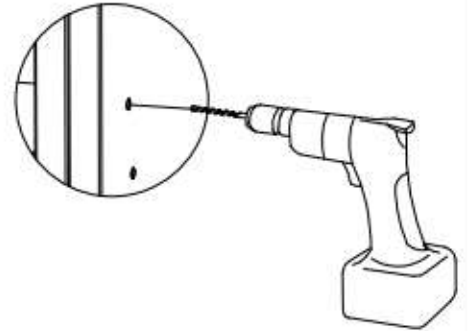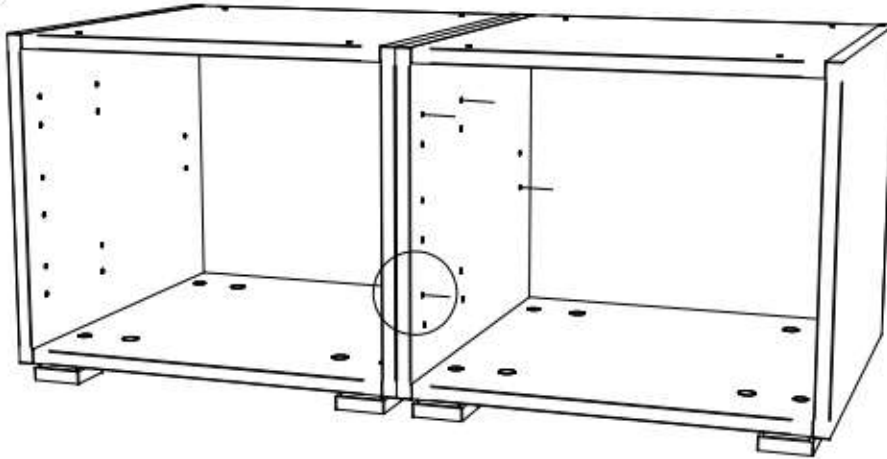

3.

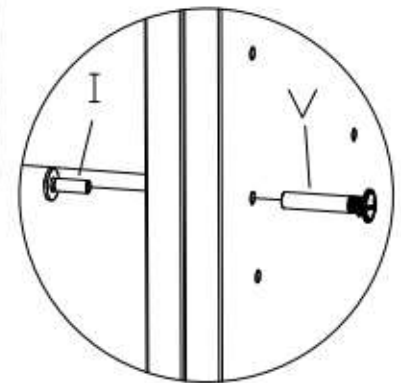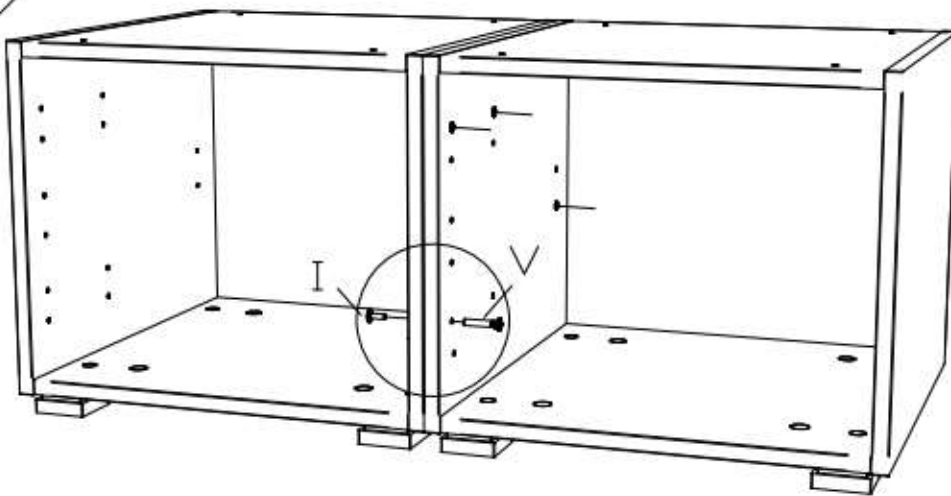

4.

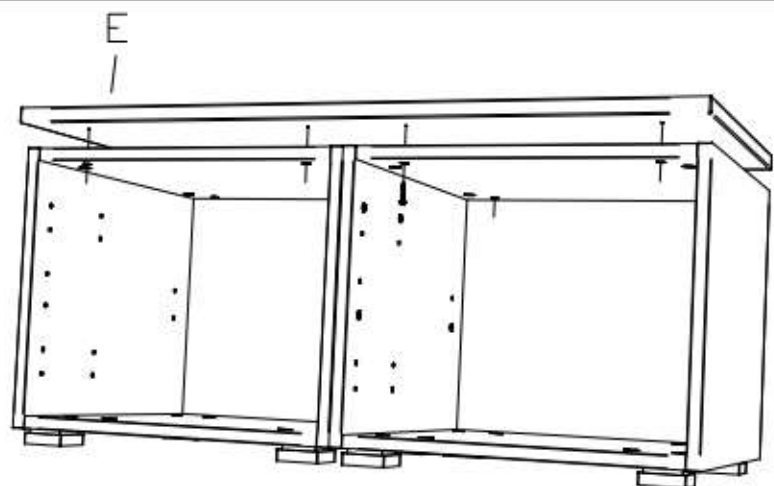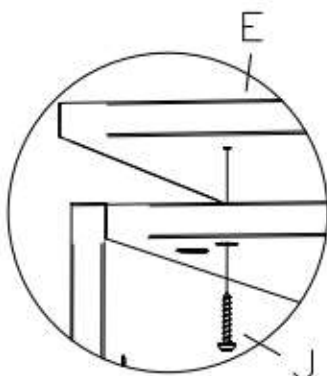

Dowio

E x1



J x8

Ø4x25



631.30900

I x4



631.20100

V x4





631.20200





Ø5



2.

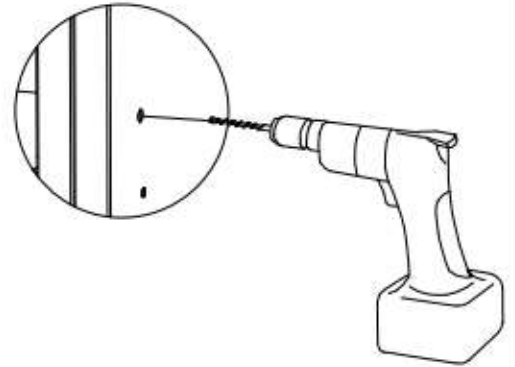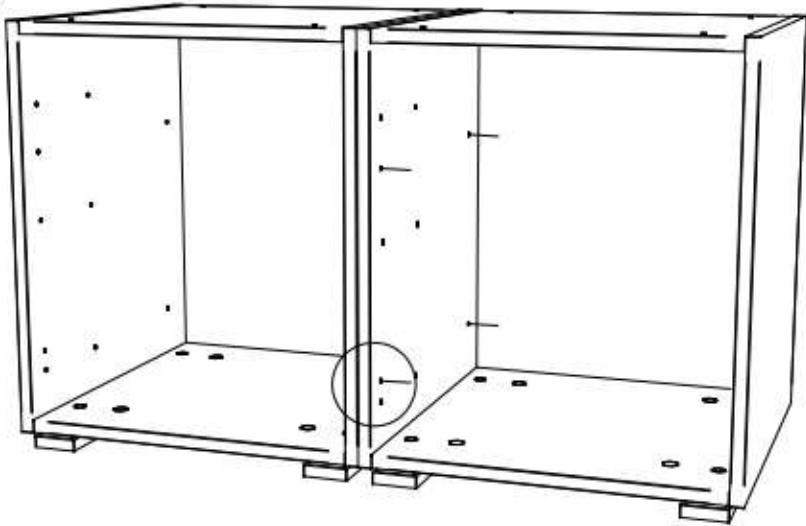

3.

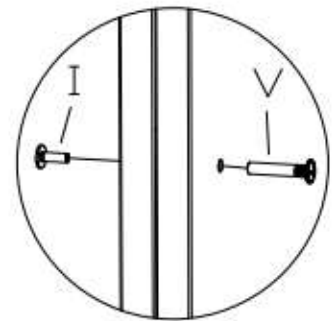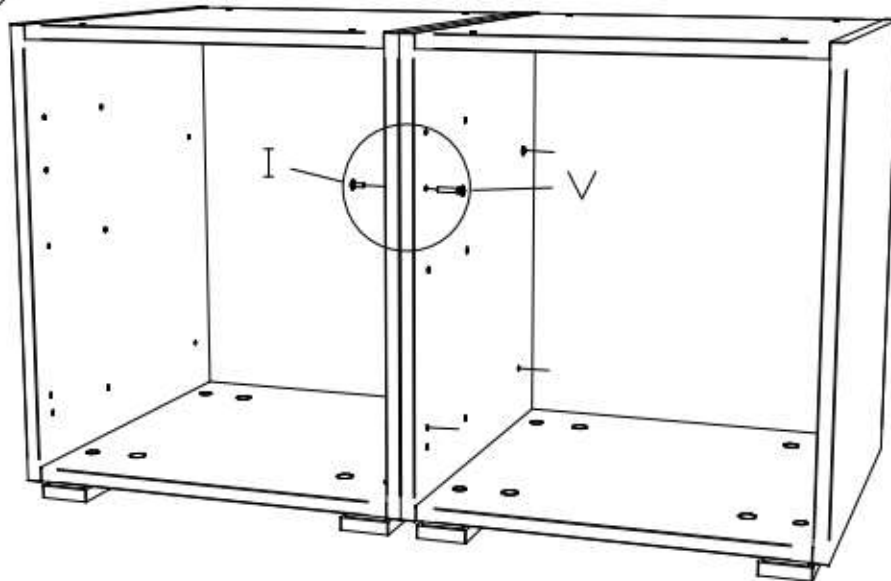

4.

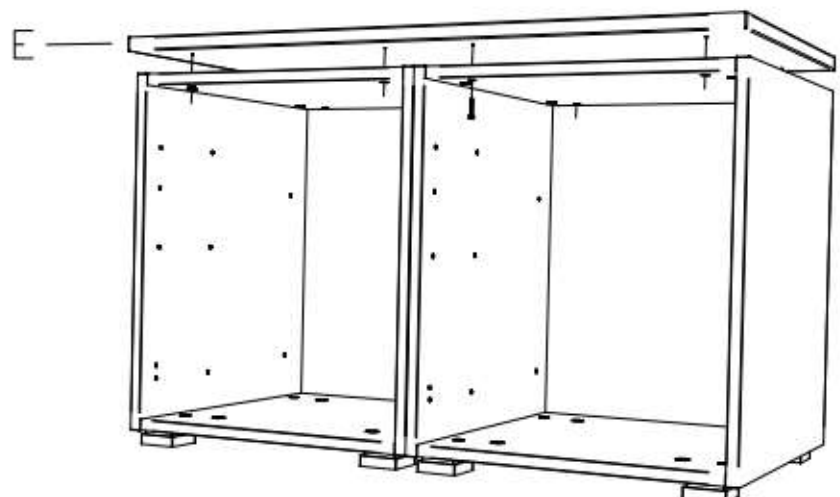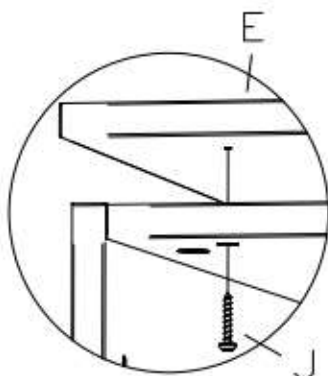

660.01322

Qunito Quatrine Portina Totrino Cassino Incentro Trequatri

E x1



J x8

Ø4x25



631.30900

I x4



631.20100



V x4





631.20200



2.

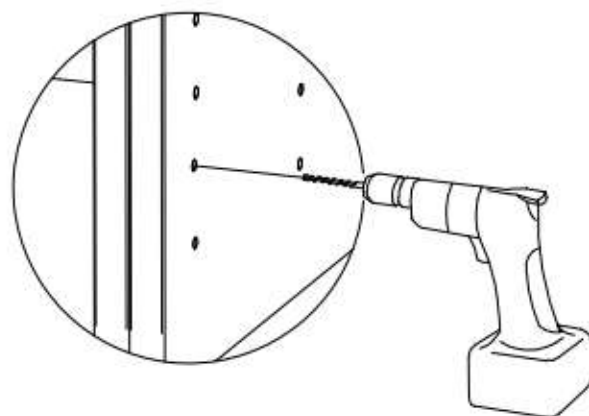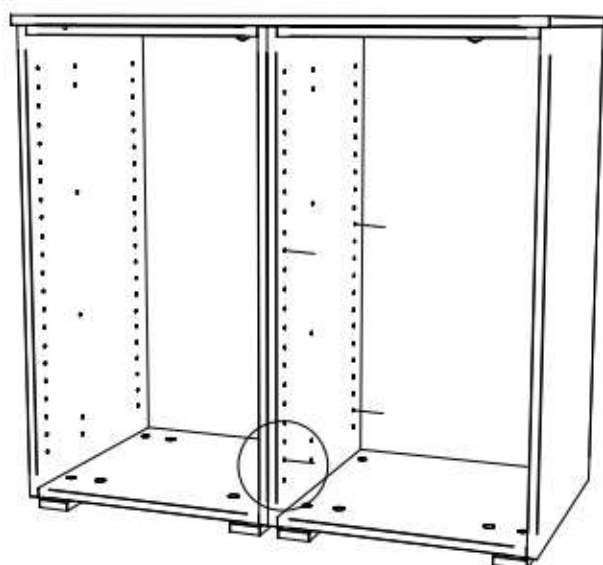

3.

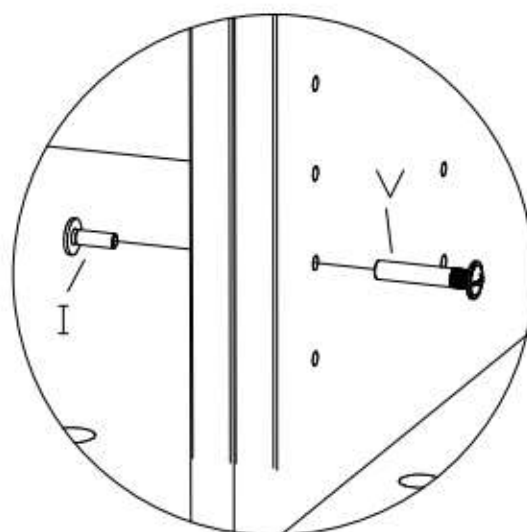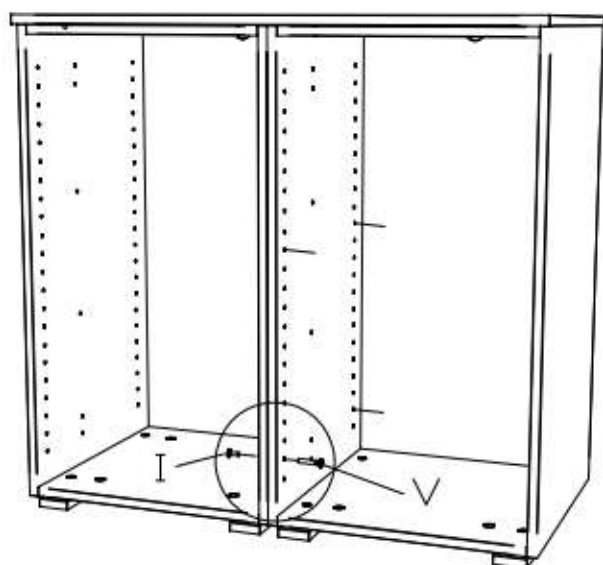

4.

